

decoding value, and then press [  ] key to select, then set the corresponding value, screen displays the corresponding CTCSS/DCS decoding value.

#### Color Code

Color code only can be set on digital channels.

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.
5. Press [  or  ] key to color code, then press [  ] key to select.
6. Press [  or  ] key to select color code values, and then press [  ] key to select.

Screen shows X(the selected color code value) is selected.

#### Repeater Slot

Repeater slot only can be set on digital channels.

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.

5. Press [  or  ] key to repeater slot, and then press [  ] key to select.
6. Press [  or  ] key to select repeater slot values, and then press [  ] key to select.

Screen shows X(the selected repeater slot value) is selected.

#### VOX level

1. Press [  ] to enter menu mode.
2. Press [  or  ] to Utilities, then press the [  ] key.
3. Press [  or  ] to radio Programming Radio, then press [  ] .
4. Input the correct password of radio (set by software), press [  ] .
5. Press [  or  ] to VOX, then press [  ] .
6. Press [  or  ] to set the VOX level you need, there are level 1-10 to be selected.

#### Tx Contact

1. Press [  ] to enter menu mode.
2. Press [  or  ] to Utilities, then press the [  ] key.
3. Press [  or  ] to radio Programming Radio, then press [  ] .
4. Input the correct password of radio (set by software), press [  ] .
5. Press [  or  ] to TxContact, then press [  ] .
6. Press [  or  ] to select the Contacts you need, radio will show the info "TxContact Selected".

### GroupList

1. Press [  ] to enter menu mode.
2. Press [  or  ] to Utilities, then press the [  ] key.
3. Press [  or  ] to radio Programming Radio, then press [  ] .
4. Input the correct password of radio (set by software), press [  ] .
5. Press [  or  ] to GroupList, then press [  ] .
6. Press [  or  ] to GroupList, you will be able to add and delete group members from the selected group list. Or you can press [  or  ] to select to add group list.

### Mic Level

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.
3. Press [  or  ] to Program Radio, then press [  ] to select.
4. Input the password, press [  ] to enter.
5. Press [  or  ] to Mic Level, press to select the Mic Level you need ,then the screen will confirm the Mic Level Selected.

### Export/Import the Digital Contact

- 1 Click the Digital Contact on the programming software
- 2 If you click "Export" after read the radio's digital contact, you can export the corresponding digital contact from radio.  
If you want to import the digital contacts which have been edited in advance, just click "Import" to select the pre established digital contacts into radio.Additional functions

### GPS system

1. Press [  ] to enter menu mode.
2. Press [  or  ] to GPS/BeiDou Info, then press[  ] to select.
3. If the current channel already has been selected Gps system, then it will show three submenus.
  - (1)GPS/BeiDou Info  
Check current GPS info of radio
  - (2)RX GPSInfo  
Receive the GPS info of Tx radio
  - (3) GPS Set  
Turn On/Off GPS function or select a specific GPS system  
Every channel has the options of "Send GPS Info"and "Receive GPS Info"

1. After you tick "Send GPS Info", radio will send the GPS info every time after you finish a digital call (Make sure GPS function has been connected)
2. After you tick "Receive GPS Info", radio will receive GPS Info from the radio which is sending GPS info.

Record(Be able to record for more than 8 hours when it's 3000 channels & 10000 contacts )

### Record On/ Off

Note: Record function is only available on digital mode.

1. You can set one of the Buttons Definitions to turn on/off the record.

2. Menu operations

- (1) Press [  ] to enter menu mode.
- (2) Press [  or  ] to Utilities, then press [  ] to select.
- (3) Press [  or  ] to select Radio Settings.
- (4) Press [  or  ] to Record.
- (5) Press [  or  ] to Turn On/ Turn Off.
- (6) Press [  ] to select.

When the record function is turned on, each digital call will be recorded and stored in the Call Log submenu.

### Record Check/Playback

1. Press [  ] to enter menu mode.
2. Press [  or  ] to Call Log, press [  ] to select.
3. Press [  or  ] to Record, press [  ] to select.
4. Press [  or  ] to record Directory (records will be stored each day), press [  ]
5. Press [  or  ] to select the record you need.
6. Press [  ] to choose from: Play, Destination ID, Source ID, Date, Time ,Tx/Rx, RecordTime.
7. Press [  ] to select.

### \*\*\*\*\*CSV Contacts(Optional function)\*\*\*\*\*

This feature adds 120 thousand CSV contacts, but this version has no record function.

CSV Contacts On/Off

1. Press [  ] to enter menu mode.
2. Press [  or  ] to Utilities, press [  ] to select.
3. Press [  or  ] to Radio Settings, press [  ] to select.
4. Press [  or  ] to CSV contacts, press [  ] to select.
5. Press [  or  ] to select CSV On/Off.

When CSV contacts function is selected, if the receiving call is in the CSV contact list, the corresponding information will be displayed.

Check and send CSV contacts

1. Press [  ] to enter menu mode.
2. Press [  or  ] to Contacts, press [  ] to select.
3. Press [  or  ] to CSV contacts, press [  ] to select.
4. Press [  or  ] to CSV contacts list, press [  ] to select.  
Or press [  or  ] to the enter number, you can enter a known number to view the corresponding CSV contact information.
5. The CSV contact list function is similar to the private call in the contact.

## Import the CSV contacts

1. Open the computer software of radio
2. Click: Program->Write contacts
3. Import contacts file (format: \*.csv)
4. Write the CSV contacts

## Export the CSV contacts

1. Open the computer software of radio
2. Click: Program->Write contacts
3. Read the contacts
4. Export the contacts

## Specifications

## General Specifications

Frequency	136-174 & 400-480MHz
Channel	3000 Channels
Frequency Stability	± 1ppm
Operating Temperature	-30°C~+60°C
Operating Voltage	7.4V DC
Dimension(Hxwxd)	131*61*36
Weight	258g(with battery)
Battery Type	Li-ion
Battery Capacity	2000mAh standard Li-ion battery
Antenna Impedance	50Ω
Audio Output Power	≤1000mW @ 16Ω
Channel Spacing	12.5KHz

## Transmitter

Output power	High: ≤ 5W (HI) Low: ≤ 1W (Low)
Frequency Stability	+/-1.0PPM
Adjacent Channel Power	≤ -60dB
Free Time Slot Power	TDMA: ≤ 57dBm
Hum and Noise	-40dB@12.5KHz
Spurious Radiation	Antenna: 9KHz-1GHz ≤ -36dBm 1GHz-12.75GHz ≤ -30dBm

FM Modulation Mode	12.5KHz: 11K0F3E
4FSK Digital Mode	12.5KHz(data only):7K60FXD 12.5KHz(data +voice): 7K60FXE
Modulation Maximum Deviation	2.5KHz@12.5KHz
Nonactive Slot Power	-57dBm
Digital Protocol	ETSI TS 102 361-1 -2 -3
Vocoder Type	AMBE+2TM
Audio Response	+1dB~3dB
Modulation BER(Bit Error Rate)	≤ 5%
<b>Receiver</b>	
Analog Sensibility	0.2μV @ 12dB SINAD
Digital Sensibility	0.25μV(BER:5%)
Adjacent Channel Selectivity	≤ -60dB @ 12.5KHz
Intermodulation	≤ 60dB
Spurious response	≥ 70dB
Audio response	+1~3dB
Rated audio power	1W
Rated audio distortion	<5%
FM Noise	≥ 45dB@25KHz /≥ 40dB@12.5KHz

**Note:** Specifications will be revised without notice due to technical improvement. Thank you.

## Rf Energy Exposure And Product Safety Guide For Portable Two-way Radios



### ATTENTION!

Before using this radio, read this guide which contains important operating instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulations.

This two-way radio uses electromagnetic energy in the radio frequency (RF) spectrum to provide communications between two or more users over a distance. It uses radio frequency (RF) energy or radio waves to send and receive calls. RF energy is one form of electromagnetic energy. Other forms include, but are not limited to, sunlight and x-rays. RF energy, however, should not be confused with these other forms of electromagnetic energy, which when used improperly, can cause biological damage. Very high levels of x-rays, for example, can damage tissues and genetic material.

Experts in science, engineering, medicine, health, and industry work with organizations to develop standards for safe exposure to RF energy. These standards provide recommended levels of RF exposure for both workers and the general public. These recommended RF exposure levels include substantial margins of protection.

All Retevis two-way radios are designed, manufactured, and tested to ensure they meet government-established RF exposure levels. In addition, manufacturers also recommend specific operating instructions to users of two-way radios. These instructions are important because they inform users about RF energy exposure and provide simple procedures on how to control it.

Please refer to the following websites for more information on what RF energy exposure is and how to control your exposure to assure compliance with established RF exposure limits:  
<http://www.who.int/en/>

## Local Government Regulations

When two-way radios are used as a consequence of employment, the Local Government Regulations requires users to be fully aware of and able to control their exposure to meet occupational requirements. Exposure awareness can be facilitated by the use of a product label directing users to specific user awareness information. Your Retevis two-way radio has a RF Exposure Product Label. Also, your Retevis user manual, or separate safety booklet includes information and operating instructions required to control your RF exposure and to satisfy compliance requirements.

## Radio License

Governments keep the radios in classification, most of the classified walkie-talkie need to get local government License, and operation is allowed. The detailed classification and the use of your two-way radios, please contact the local government radio management departments.

For the following specified classification: the USA FRS, Australian CB, the individual license is not required.

## Compliance with RF Exposure Standards (If appropriate, Reference to the actual product's Safety Marking)

Your Retevis two-way radio is designed and tested to comply with a number of national and International standards and guidelines (listed below) for human exposure to radio frequency electro-magnetic energy.

**FCC ID** The FCCID means: This radio complies with the IEEE (FCC) and ICNIRP exposure limits RF exposure environments at operating duty factors of up to 50% talk-50% listen and is approved for occupational use only.

**CE** The CE marking means: Hereby, Shenzhen Retevis Technology Co., Ltd. declares that the radio equipment type RT3S is in compliance with the RED Directive 2014/53/EU and the ROHS

Directive 2011/65/EU and the WEEE Directive 2012/19/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.retevis.com](http://www.retevis.com).

**IC ID** This device complies with Industry Canada RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

In terms of measuring RF energy for compliance with these exposure guidelines, your radio generates measurable RF energy only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode.

NOTE: The approved batteries, supplied with this radio, are rated for a 5-5-90 duty factor(5% talk-5% listen-90% standby) even though this radio complies with FCC occupational exposure limits and may operate at duty factors of up to 50% talk.

## RF energy exposure standards and guidelines (if appropriate)

Your Retevis two-way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission (FCC), Code of Federal Regulations; 47 CFR part 2 sub-part J.
- American National Standards Institute (ANSI)/Institute of Electrical & Electronic Engineers (IEEE) C95. 1-2005
- IEEE Std. 1528:2013 and KDB447498, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- Institute of Electrical and Electronic Engineers (IEEE) C95.3-2002
- International Commission on Non-Ionizing Radiation Protection (ICNIRP)

- Ministry of Health (Canada) Safety Code 6 & Industry Canada RSS-102.
- International Electrotechnical Commission IEC62209-2:2010

## RF Exposure Compliance and Control Guidelines and Operating Instructions

To control your exposure and ensure compliance with the occupational/controlled environment exposure limits, always adhere to the following procedures.

### Guidelines

- User awareness instructions should accompany the device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.

### Operating Instructions

- Transmit no more than the rated duty factor of 50% of the time. To Transmit (Talk), push the Push To Talk (PTT) button. To receive calls (listen), release the PTT button. Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy exposure only when transmitting in terms of measuring for standards compliance.
- Transmit only when people outside the vehicle are at least the recommended minimum lateral distance away from a properly installed according to installation instructions, externally mounted antenna.
- When operating in front of the face, worn on the body, always place the radio in a Retevis approved clip, holder, holster, case, or body harness for this product. Using approved body-worn accessories is important because the use of Non-Retevis approved accessories may result in exposure levels, which exceed the IEEE/ICNIRP occupational/controlled environment RF exposure limits.
- If you are not using a body worn accessory and are not using the radio in the intended use

position, in front of the face or at the body in the PTT mode or alongside of the head in the phone mode, then ensure the antenna and the radio are kept 2.5 cm (one inch) from the body when transmitting. Keeping the radio at a proper distance is important because RF exposures decrease with increasing distance from the antenna.

### Hand-held Mode

- Hold the radio in a vertical position with the microphone (and other parts of the radio including the antenna) at least 2.5 cm (one inch) away from the nose or lips. The antenna should be kept away from the eyes. Keeping the radio at a proper distance is important as RF exposure decreases with increasing distance from the antenna.



### Phone Mode

- When placing or receiving a phone call, hold your radio product as you would a wireless telephone. Speak directly into the microphone.

### Electromagnetic Interference/Compatibility

NOTE: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

### Avoid Choking Hazard



Small Parts. Not for children under 3 years.

**Turn off your radio power in the following conditions:****WARNING**

- Turn off your radio before removing (installing) a battery or accessory or when charging battery.
- Turn off your radio when you are in a potentially hazardous environments: Near electrical blasting caps, in a blasting area, in explosive atmospheres (inflammable gas, dust particles, metallic powders, grain powders, etc.).
- Turn off your radio while taking on fuel or while parked at gasoline service stations.

To avoid electromagnetic interference and/or compatibility conflicts

- Turn off your radio in any facility where posted notices instruct you to do so, hospitals or health care facilities (Pacemakers, Hearing Aids and Other Medical Devices) may be using equipment that is sensitive to external RF energy.
- Turn off your radio when on board an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

**Note:****Pacemakers**

Defibrillators or other Implanted Medical Devices Persons with pacemakers, Implantable

Cardioverter-Defibrillators (ICDs) or other active implantable medical devices (AIMD) should:

- ALWAYS keep the radio more than 15 cm from their pacemaker when the radio is turned on.
- Consult with their physicians regarding the potential risk of interference from radio frequency transmitters, such as portable radios (poorly shielded medical devices may be more susceptible to interference).
- Turn the radio OFF immediately if they have any reason to suspect that interference is taking place.

- Do not carry the radio in a chest pocket or near the implantation site, and carry or use the radio on the opposite side of their body from the implantable device to minimize the potential for interference.

**Hearing Aids**

Some digital wireless radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

**Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

**Protect your hearing:****WARNING**

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before adding headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.
- When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear.

Note: Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio's volume, the less time is required before your hearing could be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect.

## Avoid Burns



WARNING

## Antennas

- Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with the skin when the radio is in use, a minor burn can result.

## Batteries (If appropriate)

- When the conductive material such as jewelry, keys or chains touch exposed terminals of the batteries, may complete an electrical circuit (short circuit the battery) and become hot to cause bodily injury such as burns. Exercise care in handling any battery, particularly when placing it inside a pocket, purse or other container with metal objects.

## Long transmission

- When the transceiver is used for long transmissions, the radiator and chassis will become hot.

## Safety Operation



WARNING

## Forbid

- Do not use charger outdoors or in moist environments, use only in dry locations/conditions.
- Do not disassemble the charger, that may result in risk of electrical shock or fire.
- Do not operate the charger if it has been broken or damaged in any way.
- Do not place a portable radio in the area over an air bag or in the air bag deployment area. The radio may be propelled with great force and cause serious injury to occupants of the vehicle when the air bag inflates.

## To reduce risk

- Pull by the plug rather than the cord when disconnecting the charger.
- Unplug the charger from the AC outlet before attempting any maintenance or cleaning.
- Contact Retevis for assistance regarding repairs and service.

## Use of Communication Devices While Driving

- Always check the laws and regulations on the use of radios in the countries and areas where you drive.
- Give your full attention to driving and to the road.
- If available, use the hands-free facility.
- If driving conditions or regulations require it, pull off the road and park before making or answering a call.

## Approved Accessories



WARNING

- This radio meets the RF exposure guidelines when used with the Retevis accessories supplied or designated for the product. Use of other accessories may not ensure compliance with the RF exposure guidelines and may violate regulations.
- For a list of Retevis-approved accessories for your radio model, visit the following website: [www.Retevis.com](http://www.Retevis.com)

## EU Importer:

Importer: Germany Retevis Technology GmbH

Address: Uetzenacker 29, 38176 wendeburg

## Guarantee

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Purchasing Date: \_\_\_\_\_

Dealer: \_\_\_\_\_ Telephone: \_\_\_\_\_

User's Name: \_\_\_\_\_ Telephone: \_\_\_\_\_

Address: \_\_\_\_\_ Post Code: \_\_\_\_\_

### Remarks:

- 1 This guarantee card to be kept by the user, no replenishment if lost.
- 2 This guarantee card to be filled & chopped by the dealer, or it is invalid.
- 3 Don't alter the guarantee card, please confirm the serial number on the guarantee card is same as that on the machine.
- 4 One-year guarantee, charger, battery, ear-phone, antenna and cable are not under guarantee.
- 5 The user can get repairing service from the followingways:
  - Go to the shop where you buy the machine.
  - Our local repairing agents.
  - Send back to our company.

Please cut along with this line



## 2. Enter number you need.

You can disable DTMF tone by turning off all radio tone and prompts.

## Secrecy

You can activate or kill any radio in the system. For example, you might want to disable a stolen radio, to prevent thieves use it, and enable it when you get it back.

Note: radio kill or activation is limited to activate the radios with these functions.

## Radio Disable

## Use menu mode

1. Press [  ] key to enter the menu mode.

2. Press [  or  ] key to Contacts, and then press [  ] key to select, entries are in alphabetical order.

3. Press [  or  ] key to the required alias or ID, and press [  ] key to select.

Or press [  or  ] key to Manual Dial, then press twice [  ] key to enter a user alias or ID, and press [  ] key to select.

4. Press [  or  ] key to radio disable, and then press [  ] key to select.

5. The display shows the radio disable: <user alias or ID> and the LED indicator light is red.

6. Wait for confirmation.

7. If successful, emit a beep and the screen displays radio disable successfully.

Or if it fails, emit a beep and the screen displays radio fail to disable.

During radio disable operation, do not press the [  ] key, because you will not get a confirmation message.

## Radio Enable

## Use menu function:

1. Press [  ] key to enter the menu mode.

2. Press [  or  ] key to Contacts, and then press [  ] key to select, entries are in alphabetical order.

3. Press [  or  ] key to the required alias or ID, and press [  ] key to select.

Or press [  or  ] key to Manual Dial, then press twice [  ] key to enter a user alias or ID, and press [  ] key to select.

4. Press [  or  ] key to radio enable, and then press [  ] key to select.

5. The display shows the radio enable: <user alias or ID> and the LED indicator light is red.

6. Wait for confirmation.

7. If successful, emit a beep and the screen displays radio enable successfully.

Or if it fails, emit a beep and the screen displays radio fail to enable.

During radio enable operation, do not press the [  ] key, because you will not get a confirmation message.

## Scanning List

Create a scan list and assign to a single channel / talkgroup, your radio can support up to 250 scan lists, each up to 16 members. Each scan list support mixed analog and digital channels. You can edit the scan list to add / delete channels or set the priority channel.

### Check members of list

1. Use the channel knob to select a channel with pre-programmed scan list;
2. Press the [  ] key to enter the menu mode;
3. Press [  or  ] key to scan, and then press the [  ] key to select;
4. Press [  or  ] key to Viewlist the list, and then press the [  ] button to select;
5. Use [  or  ]key to see members of list.

If you set the priority, the priority icon is displayed in the left of member alias, indicating that the member is the Priority  or Priority  channel; if the priority is set to  , no priority icon.

In a scan list, you can not have more than one Priority  or Priority  channel.

### Scanning Instruction

When scanning, your radio can view if there is a voice activity in current channel through circulating pre-programmed scan list. LED lights flashing for a red light, and the scan icon  appears on the screen.

When scanning in dual mode, if you're in a digital channel and your radio locking an analog channel, radio will switch automatically from digital mode to analog mode throughout the

duration of the call. And vice versa.

There are two scanning methods

- Manual Scan: According to a pre-programmed scan on / off key or menu function to start the scan, when you start scanning, radio will detect all channels / contact groups on pre-programmed scan list.
- Auto Scan: When you select an already activated auto scan channels / contact groups, radio scans from the activated auto scan channel.

### Start/Stop Scan

Press Pre-programmed Scan On / Off KeyOr Enter The Scan Menu Function

1. Using the channel knob to select a channel of pre-programmed scan list;
2. Press [  ] to enter menu mode;
3. Press [  or  ] to scan, and then press [  ] to select;
4. If the scan is disabled, the screen displays on or if the scan is activated, the screen displays off.
5. Press [  ] to select.
6. When the scan is activated, LED indicator flashes red and displays scan icon  ; or when scanning is disabled, LED light goes out and does not display the scan icon.

## Scanning reply

Radio detect active channel/contact group when scanning, at this time radio will stay in the channel/ contact group, which is called "Scan hang time" pre-programmed time.

### Procedure:

1. Hold the radio in a vertical position and keep one to two inches (2.5 to 5.0 cm) distance from the mouth. If you enable the "channel idle tone" function, when transmitting radio release [PTT] key, you will hear a short beep, indicating that the channel is idle, waiting for your respond.
2. Within the hang time by pressing [PTT] button, LED indicator light is red.
3. Release [PTT] key to respond.
4. If you do not respond within the hang time, radio will continue down the scan.

### Add Scan Channel

1. Press [  ] key to enter the menu.
2. Press [  or  ] to select the Scan, press [  ] key to enter the corresponding submenu.
3. Press [  or  ] and select to add channel, press [  ] key to enter the corresponding submenu and add the corresponding channel.

Note: In frequency mode, when scan turned on ,rotating knob can change the scanning direction.

## Utilities

Utilities includes the following contents:

- Radio settings
- Radio Info
- Program Radio

### Radio Settings

Radio Setting includes:

- Talkaround
- Tones/Alerts
- Power
- Backlight
- Squelch
- Intro Screen
- Keypad Lock
- Language
- LED Indicator
- VOX
- Passwd Lock
- Clock
- Mode

## Talkaround

When the transponder does not work, or when the radio located outside the range of the transponder but located within the range of other radios call, you can continue to communicate. This is called "talk around."

Press Pre-programmed repeater / talk around button, you can switch between repeater / talk around mode.

### Use the menu function

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press the [  ] key to select.
4. Press [  or  ] key to talk around, and then press [  ] key to select.
5. If radio is currently in repeater mode, you can see the open, or if radio is currently in talk around you can see the close.
6. Press [  ] key to select.
7. Screen showing turn on talk around [  ] or turn off talk around.
8. The screen automatically returns to the previous menu.

Even after the shutdown, still remains talk around.

## Tones/Alerts

including the following contents:

- All Tones
- Talk Permit
- Keypad Tones

## All Tones

If desired, you can enable or disable all radio tone and prompts (except emergency incoming tone).

Press pre-programmed all Beep ON / OFF to turn on or off all radio tones.

### Use the menu function:

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press the [  ] key to select.
4. Press [  or  ] key to tones/alerts, and then press [  ] key to select.
5. Press [  or  ] key to all tone, and then press [  ] key to select.
6. Press [  ] key to select on, then enable all tone and prompts, screen displays all tone is open.  
Or press [  ] key to select Off, then turn off all tones and prompts, screen displays all tone is off.

## Keypad Tones

If desired, you can activate and deactivate call admission tone.

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press the [  ] key to select.
4. Press [  or  ] key to tones/alerts, and then press [  ] key to select.

5. Press [  or  ] key to keyboard tone, then press [  ] key to select.
6. Press [  ] key to select Open, then enable the keyboard tone, the screen shows keyboard tone is turned on.  
Press [  ] key to select off, then turn off the keyboard sound, the screen shows keyboard tone is turned off.

#### Power

You can set each channel power level to high or low. Setting: High-power radio implement communications with relatively far distance radios. Low-power radio implement communications with relatively close distance radios.

Press pre-programmed high / low power selection key, you can switch high / low transmit power.

#### Using the menu function:

1. Press the [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press the [  ] key to select.
4. Press [  or  ] key to power, and then press [  ] key to select.
5. Follow the on-screen instructions to change the current settings.
6. Press [  ] key to select the new power level.
7. Return to the previous menu screen.

Press [  ] to return to the main screen, the screen displays the power level icon.

#### Backlight

You can turn on or off the screen backlight according to the need. This setting also affects the menu button and the keyboard backlight.

Press a pre-programmed automatical backlight key to switch backlight settings

#### Using the menu function:

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press the [  ] key to select.
4. Press [  or  ] key to backlight, and then press [  ] key to select.
5. The screen displays always open, 5S, 10S, 15S options, press [  ] key to select always open, the screen will remain lit and won't turn off, or if you choose 5S, 10S, 15S, the screen backlight will be off in the corresponding time under users without any operations.

#### Squelch

You can adjust radio squelch level, thus filtering low signal intensity useless call or channel higher than normal value. Setting: Normal is the default, strict filtering (useless) call or background noise. However, a call from a remote location may also be filtered out.

Press pre-programmed strict / normal squelch button to switch between normal and strict squelch level.

#### Using the menu function:

1. Press [  ] key to enter the menu mode.

2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to squelch, and then press [  ] key to select.
5. Select strict or normal, and then press [  ] key to select.
6. The screen returns to the previous menu.

#### Intro Screen

If desired, you can enable and disable the Intro Screen display.

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to tight.
3. Press [  or  ] key to radio settings, and then press the [  ] key to tight.
4. Press [  or  ] key to Intro Screen, then press [  ] key to select.
5. The screen is on, press [  ] key to enable the Intro Screen display, the screen displays the boot screen display on.  
Or the screen is off, press [  ] key to close the Intro Screen display, the screen displays the boot screen display off.

#### Keypad Lock

You can lock the keypad to prevent accidental key input. Ways include manual and automatic keypad lock, which includes 5S, 10S, 15S three options.

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.

3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to keypad lock, then press [  ] key to select.
5. Press [  or  ] key to manual, and then press [  ] key to select, screen show to select Manual, you need to long press [  ] key to lock keypad on the main interface.
6. Press [  or  ] key 5S, 10S, 15S, the screen shows to select the corresponding time, then keypad will be locked and return to the main screen if user have not any keypad operation after corresponding period of time.
7. To unlock the keypad, press [  ] key, then press [  ] key.
8. Screen shows unlock keyboard, and then return to the main screen.

#### Language

Radio supports the following languages:

- English
- Chinese

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to the language selection, then press [  ] key.
5. Press [  or  ] key to the corresponding language option, then press [  ] key.
6. Screen displays to select corresponding language, and then jump back to the main interface.

### LED Indicator

If desired, you can activate and deactivate the LED.

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to LED indicator, and press [  ] key to select.
5. The screen displays open, press [  ] button to enable LDE light, screen shows to turn on the LED light.

Or The screen displays off, press [  ] button to turn off the LED light, screen shows to turn off the LED light.

If you disable the LED light, buttons and keyboard backlight automatically turns off.

### VOX

This function allows you to initiate voice-activated hands-free calls on pre-programmed channels. Whenever a microphone with VOX function detect voice, radio will automatically transmit signals within pre-programmed period of time.

During radio operation press [PTT] key will disable VOX function, to re-enable the VOX function, do one of the following:

- Turn off and return on radio
- Through the channel knob to change the channel, or
- Perform the following procedure:

Note: Enabling or disabling this function is limited to activate radios of these function.

Press pre-programmed VOX on / off key, to turn on or off this function.

Using the menu function:

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press the [  ] key to select.
4. Press [  or  ] key to VOX, and then press [  ] key to select.
5. Screen shows VOX off and VOX level 1-10S, if you choose to turn off, press [  ] key to disable the VOX function, emitting a beep and the screen displays VOX off. If you choose 1-10S, VOX function is enabled, and the voice transmit sensitivity is on the corresponding level. If you activate the call allowing sound, you can initiate a call using a trigger word. Waiting sound end (if activated), and then speak clearly into the microphone.

## Passwd Lock

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to passwd lock password, and then press [  ] key.
5. Use the keypad to enter the correct 8 digits password (You can pre-set by software), and then press the [  ] key.
6. If the password is incorrect, the screen displays an error code. If the password is correct, the screen displays options.
7. If the first line shows open, press [  ] key to display the power-on password application. Next time you need to enter the correct password to turn on radio. If the first line shows off, press [  ] key to display the power-on password cancellation, next time you can directly turn on radio.
8. Press [  or  ] key to change power-on password, and then press [  ] key to select.
9. Enter 8 digits new password, and then press [  ] key to select.
10. Once again, enter 8 digits new password, and then press [  ] key to select.
11. Screen displays that password was successfully changed.

Note: The power-on password must be set to eight digits.

## Clock

Clock settings are divided into:

- Time
- Date
- Time Zone

## Time

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to clock, and then press [  ] key.
5. Press [  or  ] key to time, and then press [  ] key to display the current time.
6. Press [  ] key to enter time setting interface.
7. Press [  or  ] key to move left and right to select the desired number, the selected number will reverse video display, then enter the corresponding numbers to change the time via the numeric keypad.
8. Press [  ] key to save, the screen displays the time has been saved.

## Date

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to clock, and then press [  ] key.

5. Press [  or  ] key to date, and then press [  ] key to display the current date.
6. Press [  ] key to enter the time setting interface.
7. Press [  or  ] key to move left and right to select the desired numbers, the selected numbers will reverse video display, then enter the corresponding number to change the date via the numeric keypad.
8. Press [  ] key to save, the screen displays the date has been saved.

#### Time Zone

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.
3. Press [  or  ] to Radio Settings, then press [  ] to select.
4. Press [  or  ] to Clock, then press [  ] to select Timezone.
5. Press [  or  ] to choose the timezone you need.
6. Press [  or  ] save timezone you selected.

#### Mode

Mode settings are divided into:

- CH Mode
- MR Mode

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio settings, and then press [  ] key to select.
4. Press [  or  ] key to mode and then press [  ] key.

5. Press [  or  ] key to select CH mode or MR mode, then press [  ] key to select the corresponding mode, the screen displays this mode is selected.

6. The main screen will show channel name or frequency (receiving frequency) according to the selected mode.

#### Private Call Match

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.
3. Press [  or  ] to Radio Settings, then press [  ] to select.
4. Press [  or  ] to Private Call Match.
5. Press [  ] to save Private Call Match you selected.

#### Group Call Match

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.
3. Press [  or  ] to Radio Settings, then press [  ] to select.
4. Press [  or  ] to Group Call Match.
5. Press [  ] to save Group Call Match you selected.

Note: After Group Call Match turned off, the radio will not match with all groups' ID.

#### Call Interrupt

1. On the software, choose "Allow Interrupt" on the submenu of "Channel information".
2. If some radios are on TX, when the receiving channel parameter is set, the call interrupt is allowed to transmit the transmitter to another transmitter signal, then it will automatically enter the receiving state.

### Menu Hang Time

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.
3. Press [  or  ] to Radio Settings, then press [  ] to select.
4. Press [  or  ] to Menu Hang Time.
5. Press [  or  ] to select the Hang time you need, then press [  ] to save.
6. The screen will confirm you the hang time selected.

### TX Mode

The TX mode is set to;

- The final active channel is that any situation is TX on the last call channel and is not hung up.
- The last active channel + hang up is normally TX on the last call channel and TX on a hanged channel.
- The selected channel is always TX according to the main channel.
- Selected channels + hang up under the main channel under normal circumstances and TX on a hanged channel.

### Last CH

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.
3. Press [  or  ] to Radio Settings, then press [  ] to select.
4. Press [  or  ] to Tx Mode, then press [  ].

5. Press [  or  ] to select from Last CH ,Last CH+H, Designed CH,Designed CH+H, press [  ] to select.
6. The screen will confirm Tx Mode selected.

### Radio Info

Radio contains the following information:

- My Number
- Versions

Note: At any time you can return to the previous screen by pressing the [  ] key.

### My Number

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to radio information, and press [  ] key to select.
4. Press [  or  ] key to my number, then press [  ] key.
5. The display shows radio ID and name.

If you need to change the radio ID, you get two ways:

- Changing by ID number
- Changing by Radio Num List

Changing by ID number(On software Edit Radio ID should be choosed)

1. Press [  ] to enter the menu.
2. Press [  or  ] to Utilities, and then press [  ] to select.

3. Press [ or ] to Radio Info, then press [] to select.
4. Press [ or ] to My number then press [].
5. Press [ or ] to select Edit Radio ID, press [].
6. Press ID you need, then press [], the screen will confirm ID has been changed.

#### Changing by Radio Num List

1. Press [] to enter the menu.
2. Press [ or ] to Utilities, and then press [] to select.
3. Press [ or ] to Radio Info, then press [] to select.
4. Press [ or ] to My number then press [].
5. Press [ or ] to Radio Num List, press [].
6. Press [ or ] to the radio number you need, press [].
7. The screen will confirm ID has been selected.

#### Versions

Display radio firmware version.

1. Press [] key to enter the menu mode.
2. Press [ or ] key to utilities, and then press [] key to select.
3. Press [ or ] key to radio information, and press [] key to select.
4. Press [ or ] key to radio versions, and then press [] key.
5. The screen will display the current firmware version, Codeplug version.

#### Program Radio

Program radio mainly includes editing the channel contents

Channel contents can be edited include:

- RX Frequency
- Tx Frequency
- Channel Name
- Time Out Timer
- CTC/DCS
- Add CH
- Color Code
- Time Slot
- VOX
- TxContact
- GroupList
- Mic Level

#### Rx Frequency

1. Press [] key to enter the menu mode.
2. Press [ or ] key to utilities, and then press [] key to select.
3. Press [ or ] key to program radio, and then press [] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [] key to select.

5. Press [  or  ] key to receiving frequency, and then press [  ] key to select.
6. The screen displays receiving frequency of the current channel, and then press [  ] key to select.
7. Press the number keys to enter the corresponding number, press [  ] key to delete the last number, press [  ] to return to the previous menu.
8. After finish the change, press [  ] key, the screen displays receiving frequency has been saved.

Note: Editing frequency will be limited within the frequency range setted by programming software, if less than the write frequency range setted by software, the final change result will be the minimum frequency of frequency range setted on software, otherwise it is maximum.

#### Tx Frequency

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.
5. Press [  or  ] key to transmitting frequency, and then press [  ] key to select.
6. The screen displays transmitting frequency of the current channel, and then press [  ] key to select.
7. Press the number keys to enter the corresponding number, press [  ] key to delete the last number, press [  ] to return to the previous menu.

8. After finish the change, press [  ] key, the screen displays transmitting frequency has been saved.

Note: Editing frequency will be limited within the frequency range setted by programming software, if less than the write frequency range setted by software, the final change result will be the minimum frequency of frequency range setted on software, otherwise it is maximum.

#### Channel Name

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.
5. Press [  or  ] key to the channel name and press [  ] key to select.
6. The screen displays the current channel name, press the [  ] key to switch the input method to enter the relevant letters, numbers or characters, the same as the input method and text editing.
7. After the change is complete, press [  ] key, the screen displays channel name has been saved.

## TOT

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.
5. Press [  or  ] key to TOT, and then press [  ] key to select.
6. The screen displays infinite, 15S, 30S ... 555S and other options (increasing 15S each time), press [  or  ] key to the corresponding option, then press [  ] key to select; if you choose infinite, the screen displays transmit time close, if you select others, the screen display corresponding time selected.

## CTC/DCS

CTCSS/DCS can only be set on analog mode, including:

- CTCSS/DCS encoding
- CTCSS/DCS decoding

## Encode

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.

4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.
5. Press [  or  ] key to CTCSS/DCS, and then press [  ] key to select.
6. Press [  or  ] key to CTCSS/DCS encoding, and then press [  ] key to select.
7. Screen display off and a set of CTCSS/DCS encoding value, press [  or  ] key to off, and then press [  ] key to select, and there will be no CTCSS/DCS encoding value, screen displays CTCSS/DCS encoding value off; press [  or  ] key to CTCSS/DCS encoding value, and then press [  ] key to select, then set the corresponding value, screen displays the corresponding CTCSS/DCS encoding value.

## Decode

1. Press [  ] key to enter the menu mode.
2. Press [  or  ] key to utilities, and then press [  ] key to select.
3. Press [  or  ] key to program radio, and then press [  ] key to select.
4. Use the keypad to enter the correct Program radio password (programmed by software), and then press [  ] key to select.
5. Press [  or  ] key to CTCSS/DCS, and then press [  ] key to select.
6. Press [  or  ] key to CTCSS/DCS decoding, and then press [  ] key to select.
7. Screen display off and a set of CTCSS/DCS decoding value, press [  or  ] key to off, and then press [  ] key to select, and there will be no CTCSS/DCS decoding value, screen displays CTCSS/DCS decoding value off; press [  or  ] key to CTCSS/DCS decoding value, and then press [  ] key to select, then set the corresponding value, screen displays the corresponding CTCSS/DCS decoding value.

## Logout Emergency Mode

The walkie talkie will logout emergency mode when any of the following situations happen.

- Confirm with the received emergency call, or
- Meet with the max emergency call, or
- press the pre-programmed emergency off key, or
- Press[PTT]key.

Notice: Emergency mode will be logout when power off the walkie talkie. Radio will not under emergency mode when the radio is power on next time.

# Menu operation

## Settings

Professional FM Transceiver

## Menu operation

### Character Input

Users can use the 3 x 4 alphanumeric keypad to access the radio's function. When you're using the keypad to input a user alias or text messages, walkie-talkie input contains three modes: 1, English letters mode, 2, Chinese input mode, 3, digital input mode. When using the keypad input ID, you can only select the digital mode.

### English Typing:

Users have to press a button several times for getting some characters. The following table shows how many times needed to press a button to get the required character.

Button	1	2	3	4	5	6	7	8	9	10	11	12	13
1	1	.	,	?	!	@	&	'	%	-	:	*	#
2	a	b	c	2	A	B	C						
3	d	e	f	3	D	E	F						
4	g	h	i	4	G	H	I						
5	j	k	l	5	J	K	L						
6	m	n	o	6	M	N	O						
7	p	q	r	s	7	P	Q	R	S				
8	t	u	v	8	T	U	V						
9	w	x	y	z	9	W	X	Y	Z				
0	0	Space											
*	*												
#	Press # to switch mode.												

### Chinese Typing

Number 1 is a button of punctuation s selection input, Number 2-9 are correspond Pinyin input, when user input something, the screen shows the pinyin input interface, the first line of interface shows the contents inputted by user., second line of interface shows the Chinese characters what users input. When the content of the pinyin input interface show in the first row, users can move [  or  ] to select Pinyin, users can press [  ] button to delete the Pinyin what they inputted previously one by one, when all the Pinyin characters were deleted, Pinyin input interface disappears. Press [  ] button to choose corresponding Chinese characters and display them in the editing area, At this time the Chinese character input finished, Pinyin input interface disappears. . Pressing\* button shows \*, pressing 0 button shows space, press # to switch input modes.

### Numerical Writing

When in the Numbers input mode, press the number keys to display the corresponding number, press the "key to display" on the screen, press # to switch input mode.

Note: When users Enter a user alias, ID, or text messages, if editing area without any content, then the [  ] button is used for returning to the higher level menu, or else if there is any content on the editor area, pressing [  ] will delete one character before the cursor at one time, until the editing area has no content, then press the [  ] button to return to the higher level menu.

## Menu Application

1. Press [  ] to enter Menu, then press left or right [  or  ] to access the menu function
2. Press [  ], select a function or go into a sub menu
3. Press [  ] to return the higher level menu

Note: After a period of time not activity radio will automatically exit and return to the main menu screen (hang time is set by the programming software).

## Radio check

If there are any activation, this feature allows you to determine whether there is other two way radio active inside the system, and does not disturb the walkie-talkie users, none-voice or visual notice appears on the target two way radio

## Send Radio Check

Using menu:

1. Press [  ] to enter menu.
2. Press [  or  ] button to select Contacts, then press [  ] to select.
3. Press [  or  ] to The required user alias or ID, then press [  ] to select.  
Or press [  or  ] key to manual dialing, and then press [  ] key to select. If there are before calling ID, show ID and along with the flashing cursor, using the keyboard editing ID, press [  ].
4. Press [  or  ] to radio detection, and then press [  ] to select.

5. When Screen displays radio detection: < user alias or ID >, it is indicating the ongoing of radio detection. The LED indicator light is red.
6. Waiting for confirmation
7. If the target radio is active in the system , then it makes a prompt sound, screen will show that target two way radio has responded shortly.  
Or if the target radio in the system is not active, then it makes a prompt sound, screen will show that target two way radio has no answer shortly.
8. Two way radio returns to user alias or ID screen. If you press [  ] when waiting for confirmation, made a prompt sound, two way radio will end all retry and exit the two way radio detection mode.

## Monitor

Using monitoring function to open the target two way radio's microphone (only the user alias or ID). You can use the function to monitor any sound around target two way radio.

Your must allow your two way radio to use this function by programming it.

## Start Monitor

Using the menu:

1. Press [  ] to enter the menu.
2. Press [  or  ] to Contacts,then press [  ] to select.
3. Press [  or  ] to The required user alias or ID, then press [  ] to select.

Or press [ or ] key to manual dialing, and then press [ ] key to select.

If there are any calling ID remains before, radio shows the ID and along with the flashing cursor, using the keyboard to edit the ID, press [ ] key to choose.

Or press [ or ] key to manual dialing, and then press [ ] key to select. Inputting the user alias or ID, and then press [0k] key to select.

4. Press [ or ] to select Remote Monitor then press [ ] to select.

5. When two way radio makes a prompt sound, LED light turns green.

6. Waiting for confirmation.

7. Screen displays Monitor successed,

Or screen displays Monitor failed

If success: two way radio began to receive voice signals from the radios which are being monitored voice and screen displays two way radio are moniting, until the end of the duration of the preprogrammed, two way radio made a prompt sound, and the LED light puts out, screen display that monitoring ends.

If failed: two way radio Repeats until reach the preprogrammed attempts.

### Contacts setting

Contacts is "address book" for handheld two way radio. Each entry corresponds to an alias or ID used to start the call. In addition, each item, according to the different content setting, relate to three types of call: group calling, single call, all call. Your radio support digital address book.

The Contactsí entries display in the following information

- Contacts

- New Contact

- Manual Dial

Note: you can add, delete, edit Contacts person in the digital address book(contacts)

### Group Call With Contacts

1. Press [ ] to enter menu.

2. Press [ or ] to contacts, then press [ ] to choose, entries arrange in alphabetical order.

3. Press [ or ] to required calling group's alias or ID.

4. Holding the radio and let it in a vertical position and keep mouth 1 to 2 inches (2.5 to 5.0 cm) with radio.

5. Press [PTT] to start calling, the LED turns red. The screen displays the calling group's alias or ID,as well as icon of group call.

6. Releasing (PTT) button to receive, when any user response within the group, the LED light turns green. You will see on the screen group call icon of user's ID.

7. If you enable the "channel Free prompt " function: when the target radio release the (PTT) button, you will hear a short beep, said this channel is idle, waiting for your answer. Press the call key (PTT) to answer. If in a preprogrammed group called hang time without voice activity, the call is ended.

## Private Call With Contacts

1. Press [  ] to enter menu.
2. Press [  or  ] to Contact, then press [  ] to choose, entries arrange in alphabetical order.
3. Press [  or  ] to required calling group's alias or ID.  
Or press [  or  ] key to manual dialing, and then press [  ] key to choose. If there is a user alias or ID called before, radio shows ID and along with the flashing cursor, using the keyboard editing this ID.  
Or press [  or  ] key to manual dialing, and then press [  ] key to choose, using the keyboard to enter a new ID.
4. Holding the radio and let it in a vertical position and keep mouth 1 to 2 inches (2.5 to 5.0 cm) with radio.
5. Press [PTT] to start calling, the LED turns red. The screen displays the calling group's alias or ID, as well as icon of group call.
6. Releasing (PTT) button to receive, when any user response within the group, the LED light turns green. You will see on the screen group call icon of user's ID
7. If you enable the "channel Free prompt" function: when the target radio release the (PTT) button, you will hear a short beep, said this channel is idle, waiting for your answer. Press the call key (PTT) to answer. If in a preprogrammed group called hang time without voice activity, the call is ended.
8. You will hear a sound short, screen shows the call ended.

## Note:

If you release(PTT) button when you are setting up the call, and when it will exit and return to the previous screen without any remind. Radio can be preprogrammed executive two way radio are testing before establishing single call. If the target radio did not reply, you will hear a short beep, and screen shows the other radios did not reply. Two way radio return to menu before starting the radios around test.

## New contact

1. Press [  ] key to enter the menu.
2. Press [  or  ] to Contacts, and then press the [  ] key to select.
3. Press [  or  ] to the New Contact, and then press the [  ] key.
4. Press [  or  ] to Private Call or Group Call, and then press the [  ] key.
5. Enter the ID number and then press the [  ] key.
6. Enter the alias, and then press the [  ] key.
7. Press [  or  ] to select the required hint, and then press the [  ] key.
8. Screen shows that the contact has been saved.

Note: When the contact shortcut key is set, the standby radio can quickly skip to the contact position in the Contacts by the corresponding shortcut key on the keyboard.

## Call Log

Your radio can record all the recent dialed, received, and not answered call. Use the calling record function view and manage the recent calls.

## Checking New Call's Number

Menu items can show the not answer call, received calls and dialed call.

1. Press [  ] key to enter the menu mode.
2. Press the [  or  ] key to the Call Log, and then press [  ] key to choose.
3. Press [  or  ] to the required list, and then press [  ] key too choose.
4. The screen on the top of the list shows the recent entries.
5. Press [or]check list, press (PTT) at the current selected aliases or ID to start a call.

#### Missed Call

Whenever you miss call, two way radio will display a not answered call, select view or view later.

##### Note:

If you press (PTT),when you're viewing missing call number, radios will exit the missing call screen and establishing a single call again.

1. The screen shows the missing call, and the missing call's number and view.
2. Press [  ] view missing call's ID, missing call's record list displayed on the screen.  
Press [  ] to store or delete this entry; Or press[  or  ] key to view later, and then press [  ]key choice, return to the main screen.

#### Storing Missed call's Alias Or ID

1. Press [  ] key to enter menu.
2. Press the [  or  ]key to Call Log, and then press [  ] key to choose.
3. Press the [  or  ]key to missed call, and then press [  ] key to choose.
4. Press [  or  ]key to missed call's alias or ID, and then press [  ] key to choose.
5. Press the [  or  ]key to store, and then press [  ] key to choose

6. Radio Shows flashing cursor, if needed, enter the ID alias, and then press [  ] key.

7. The screen contacts have been saved.

You can also enter ID without alias.

#### Deleting Calling Log's Record

1. Press [  ] key to enter the menu.
2. Press the [  or  ]key to Call Log and then press [  ] key to choose.
3. Press the[  or  ]key to missed call, and then press [  ] key to choose.
4. Press [  or  ]key to missed call's alias or ID, and then press [  ] key to choose
5. Press [  or  ]key to delete the entries,then press [  ] key to select if you need to delete this entry.
6. Select "yes" , then press [  ] key to delete the entries, screen appears entry deleted;  
Or select "no" , press [  ] key to return to previous screen.

When you select a call list but there is no entry in, the screen will display the list is empty, if the keyboard is open at this time, will be a low tone hint sound.

#### Call Alert Operation

Call alert makes you can suggest a specific radio users in the possible time to call you back. This feature applies only to the user alias or ID, and can be used through the menu by address book or manual dialing.

#### Receiving And Checking Call Alert

When you receive a call alert, screen shows call prompt, alternating transmit radio's alias or ID.

1. YOU will hear sound of repeat, LED light turn and shine red.
2. Then press and release [PTT] to confirm the prompt, or press [ ] to select "neglect" to exit the call reminder.

#### Starting Call Alert From Contact List

1. Press [ ] key to enter the menu.
2. Press the [ ▲ or ▼ ] key to Contacts, and then press [ ] key to choose.
3. Press [ ▲ or ▼ ] key to missed call's alias or ID, and then press [ ] key to choose. Or press [ ▲ or ▼ ] key to manual dialing, and then press [ ] key to choose, a flashing cursor appears, then enter the user ID you want to call, and then press [ ] key.
4. Press [ ▲ or ▼ ] key to Call Alert, the screen display Call Alert:< user's alias or ID >, and then press [ ] key and instructions have been sent Call Alert.
5. When the radio send call alert, the LED indicator for the red light.
6. If you receive calls prompt confirmation, issued a prompt, and display the call alert success. Or prompt confirmation if not received a call, send a hint sound, and the screen call failure.

#### Messages Function

Your radio can receive data, such as from another radio sent text messages, message of a maximum length of 144 characters, whole message is not longer than 50 lines.

#### Edit And Send SMS

##### Using the menu

1. Press [ ] key to enter the menu.

2. Press the [ ▲ or ▼ ] key to Messager, and then press [ ] key to choose.
3. Press [ ▲ or ▼ ] key to write, and then press [ ] key.
4. A flashing cursor appears, using the keyboard to input messages, press [ ] key to move to the left one, press [ ] button to the right one, when editing area have content, press the [ ] key to delete any useless character, otherwise when editing area without content to return to the higher level menu.
5. After writing the text, press [ ] to choose to send or save.
6. When on the process of editing, user can choose by pressing the [ ] key to empty option to empty all the content of the editor, quickly return to the higher level menu.
7. Choose the [ ▲ or ▼ ] key to the alias name or ID, and then press [ ] key to select. Or press [ ▲ spending] key to manual dialing, and then press [ ] button, enter your user ID and press [ ] key.
8. The screen shows message: < user/group name or ID > call, sending message are being confirmed.
9. If the messages sent successfully, issued a prompt sound, and the screen displays text message has been sent. Or if the message was not sent, issued a high tone hint sound, and screen displays text message sent failure. If message sent failure, radio will return to chance to return to the retransmission selection screen.

#### Send Quick Text

Two way radio support maximum 50 programming of prefabricated text messages by the agent. When a predefined text message, you can edit every message before you can send each message.

## Using the menu

1. Press [  ] key to enter the menu.
2. Press the [  or  ] key to Messages, and then press [  ] key to choose.
3. Press [  or  ] key to Quick Text, press [  ] key to choose.
4. Press [  or  ] key to the required quick text, press [  ] key to choose.
5. A flashing cursor appears, using the keyboard to input messages, press [  ] key to move to the left one, press [  ] button to the right one, when editing area have content , press the [  ] key to delete any useless character, otherwise when editing area without content to return to the higher level menu.
6. After writing the text message, press [  ] to choose to send or save.
7. If the messages sent successfully, issued a prompt sound, and the screen displays text message has been sent.  
Or if the message was not sent, issued a high tone hint sound, and screen displays text message sent failure. If message sent failure, radio will return to chance to return to the retransmission selection screen.
8. After Choose send press [  or  ] to the alias or ID, and then press [  ] key to choose.  
Or press [  or  ] key to manual dialing, and then press [0 k] key choice. Enter the user alias or ID, then press [  ].
9. The screen shows message: < user/group name or ID > call, text messages were a being sent to confirm.
10. If the messages sent successfully, issued a prompt sound, and screen display text

message has been sent. Or if the message can't send, send out a high tone hint sound, screen display message sent failure, failure if the SMS messages, intercom chance to return to the retransmission selection screen.

## Send Quick Text With A Key

1. Press Preprogrammed,single bond calls to a predefined alias or ID sends a prefabricated text messages.
2. The screen displays a text message: < user/group name or ID > call, to confirm text messages were being sent
3. If the messages sent successfully, issued a prompt sound, and the screen display text message has been sent.  
Or if you cannot send text messages, screen display text message sent failure. If message sent failure, intercom chance to return to the retransmission selection screen.

## Manage The Failed SMS

In retransmission selection screen, you can choose the following options:

- Resend
- Forward
- Edit

## Resending message

1. Press [  ] to resend same message to same user/group name or ID.
2. If the messages sent successfully, issued a prompt sound, and display messages sent or

if you cannot send text messages, screen display text message sent failure.

### Forwarding message

Choose to forward message to another User/group name or ID.

1. Press the [  or  ] key to forward, and then press [  ] key choose.
2. Press [  or  ] to the alias name or ID, and then press [  ] key to choose.  
Or press [  or  ] key to manual dialing, and then press [  ] button to choose, enter your user ID and press [  ] key.
3. The screen display a text message: < user/group name or ID > call, to confirm text messages were being sent.
4. If the messages sent successfully, issued a prompt sound, and the screen display text message has been sent.  
Or if the message was not sent, issued a high tone hint sound, and screen displays text message sent failure.

### Editing messages

Choosing edit to edit message before you edit.

Note: if you have a subject line (receive text messages from email program), you can't edit the subject line.

1. Press [  or  ] key to edit, then press [  ] key to choose
2. A flashing cursor appears, using the keyboard to input messages, press [  ] key to move to the left one, press [  ] button to the right one, when editing area have content,

press the [  ] key to delete any useless character, otherwise when editing area without content to return to the higher level menu.

3. After writing the text, press [  ] choose to send or save.
4. When in the process of editing, can choose by pressing the [  ] key to empty option to empty all the content of the editor, quickly return to the higher level menu
5. Choose after [  or  ] button to send the required alias or ID, and then press [  ] key to choose.  
Or move [  or  ] key to manual dialing, and then press [  ] button, enter your user ID and press [  ] key.
6. Screen displays message: < user/group name or ID > call, to confirm text messages were being sent
7. If the messages sent successfully, issued a prompt sound, and the screen display text message has been sent.  
Or if the message was not sent, issued a high tone hint sound, and screen displays text message sent failure.

### Manage The Sent SMS

Once a message is sent to another radio, it will be saved in the "sent items". Send after sending a text message has always been to "sent items" at the top of the list. The sent items folder can store up to 50 recently send text messages. After the folder is full, the next send text messages will automatically replace the earlier messages in this folder.

Note: at any time pressing the [  ] key can return to the previous screen.

## Check the sent messages

Using the menu function:

1. Press [  ] button to enter the menu.
2. Press the [  or  ] key to Messages , and then press [  ] key to choose.
3. Press [  or  ] to sent items, and then press [  ] key to choose.
4. Press the [  or  ] key to the SMS, and then press [  ] key choose. If the message from the email program, a subject lines, will appear in the top right corner of the screen icon indicates state of SMS.

## Sending the sent messages

When the view sent messages, you can choose the following options:

- Resend
- Forward
- Edit
- Delete

1. Check the message, press [  ] key again
2. Press the [  or  ] key to resend, then press [  ] key to choose.
3. The screen displays: < user/group name or ID > call, confirm that it is preparing to send the same message to the same target radio.
4. If the messages sent successfully, issued a prompt sound, and the screen display text message has been sent.

Or if the message was not sent, issued a high tone hint sound, and screen displays text message sent failure. If message sent failure, intercom chance to return to the retransmission options screen. Press the [  ] key to send SMS weight to the same user/group name or ID.

Note: Except for pressing the [  ], [  or  ] key, if you change the volume and the press any other key, will return to this message. When you press [PTT] for a single call or group call, or as a response to the group calling, radio will exit the retransmission selection screen. If received text messages or remote sensing information, emergency call, or call the police, or call reminder, radio will exit the retransmission selection screen.

If you press [PTT] in response to a single call (in addition to the radio in the show did not answer the call screen), or at the end of all call, the screen will return to resend selection screen. Press [  ] key, enter the forwarding, edit, or delete selection screen.

- choose forward, will choose the SMS sent to speak to other groups/user alias or ID.
- choose to edit, to edit the selected text messages before sending
- choose delete, delete the selected text.

Note: if you screen out SMS messages when send text messages, so radios will be in the "sent items" folder for SMS status updates, not the tip or by voice prompt. If the messages in the sent items folder state before update, walkie-talkie pattern changed or blackout, walkie-talkie will not be able to complete the ongoing message processing, and automatically start tag to the icon of failure. This radio can handle 5 text messages at the same time. At this stage, the radio can't send a new message, and automatically start tag icon to send failure.

## Deleting all Sent Messages In the "sent items"

## Using the Menu Function

1. Press the [  ] button to enter the menu.
2. Press the [  or  ] key to Messages, and then press [  ] key choice.
3. Press [  or  ] to Sent Items, and then press [  ] key choice.
4. Press the [  or  ] key to delete all, and then press [  ] key choice.
5. When it appears to delete messages, press [  ] button, select "yes" project has clear screen display has been sent.

Or delete the text, press [  or  ] to no, and click [  ] key to return to the previous screen. When you select the "sent items" but not one of them text messages, the screen will display the list is empty, if the keyboard is open at this time, will be a low tone hint sound.

## Receive SMS

When your radio are receiving SMS, the left of the screen shows the sender alias or ID ICONS and text messages.

When receive text messages, you can choose the following options:

- reading?
- Reading Later
- delete

Note: when the radio shows tip on the screen, please press (PTT), two way will exit and to establish a single call or text message screen group call.

## Check the SMS

1. Press the [  or  ] key to Read, and then press [  ] key to choose.
2. the selected text messages on the inbox opened, if the message is from the email program, it will appear a subject line.
3. Click [  ] key to return to your inbox.

Or press [  ] to reply,forward or delete messages.

Press [  or  ]key to enter later view or delete selection screen: Later, select view screen before returning to receive messages.

Choose delete, delete receive text messages.

## Manage Received SMS

Use your inbox to manage messages. inbox can store up to 50 text messages at Most.

Two way radio supports the following text options:

- Reply
- Forward
- delete
- Delete all

store the message in the inbox in the order of received time .

Note: at any time according to the [  ] key can return to the previous screen.

## Check The Inbox SMS

1. Press the [  ] button to enter the menu.
2. Press the [  or  ] key to Messages, and then press [  ] key to choose.
3. Press [  or  ] to the inbox, and then press [  ] key to choose.
4. Press the [  or  ] key to check the message. If the messages are from the email program, it will appear a subject line.
5. Press the [  ] key to choose the current text, then press [  ] key again to reply, delete, or forward this message.

Unread messages:  , Already read message: 

## Reply The Inbox SMS

Use the menu function:

1. Press [  ] button to enter the menu.
2. Press the [  or  ] key to message, and then press [  ] key to choose.
3. Press [  or  ] to the inbox, and then press [  ] key to choose.
4. Press the [  or  ] key to the SMS, and then press [  ] key to choose. If the messages are from the email program, it will appear a subject line.
5. Press again [  ] button to enter submenu.
6. Press [  or  ] to reply, and then press [  ] key to choose.
7. Press [  or  ] to write messages, and then press [  ] key choice, a flashing cursor, using a keyboard editing text messages.  
Or press [  or  ] key to prefabricated text messages, and then press [  ] key to choose. Choose the required message after press [  ] a flashing cursor, if needed, with the keyboard editing your message.
8. After Writing the text, press [  ].
9. The screen displays message : < user/ call group name or ID >, to confirm. text messages were being sent
10. If the messages sent successfully, issued a prompt sound, and screen display text message has been sent.  
Or if you cannot send text messages, screen display text message sent failure. If message sent failure, radio return to the retransmission selection screen.

## Deleting the inbox messages

Use the menu function:

1. Press the [  ] button to enter the menu.
2. Press the [  or  ] key to message, and then press [  ] key to choose.
3. Press [  or  ] to the inbox, and then press [  ] key to choose.
4. Press the [  or  ] key to the SMS, and then press [  ] key choice. If the messages are from the email program, it will appear a subject line.
5. Press again [  ] button to enter submenu.
6. Press the [  or  ] key to delete, and then press [  ] key to choose.
7. Delete messages, press [  or  ] key to "yes", then press [  ] key to choose.
8. Screen appears short message has been deleted.
9. The screen back to inbox.

## Deleting all messages in the inbox

Use the menu function:

1. Press the [  ] button to enter the menu.
2. Press the [  or  ] to the Message, and then press [  ] key to choose.
3. Press [  or  ] to the inbox, and then press [  ] key to choose.
4. Press the [  or  ] key to delete all, and then press [  ] key to choose.
5. When it appears Deleting the messages, press [  or  ] select yes, and then press [  ] key to choose.
6. Then The screen inbox was empty already.

When you select the "inbox" but not one of them text messages, the screen will display the list is empty, if the keyboard is open at this time, will be a low tone hint sound.

## Encryption

If you enable this feature, which is beneficial to prevent other users on the channel by using the method of software encryption for unauthorized eavesdropping. The launch of signaling and user identification part unencrypted. Your radio must be enabled on the channel encryption function, can send encrypted, even if the receiving transmission is not must request to do so.

### Basic encryption

Two way radio can only be assigned more than one type of encryption. If users Call for encryption or decryption of data transmission, must make to be preprogrammed walkie-talkies and launch radio has the same "encryption keys" (suitable for basic encryption). If your radio to receive different encryption keys or key values and key encryption call ID, you will hear the sound of the transport chaos encryption (basic).

Press the preliminary programming encryption keys on or off.

## DTMF

Dual Tone Multi-Frequency (DTMF) function allows to operate radio when there is interference in the radio system.

To initiate a DTMF call

1. Press and hold [PTT] key.

# To customers

Thank you very much for using our two-way radios. This product has a newly developed function menu and humanism operation design, making it easy to use. It will meet your requirement by the compact size and reasonable price.

# Welcome to use our two-way radio

Professional FM Transceiver

Frequency band:  
136-174 & 400-480MHz  
120.000 contacts upgradeable  
GPS Optional  
Use Time-Division Multiple-Access (TDMA) digital function  
Dual time slot for repeater  
Dual time slot for point to point  
Firmware upgradeable  
Lone worker  
Encryption function  
Compatible with Mototrbo Tier I & II  
Single call,group call and all call  
Analog and digital combined  
Remote kill/stun and activate  
Comply with digital protocol ETSI TS 102 361-1,-2,-3  
Color LCD display  
Up to 3000 channels  
Transmit interruption  
Group call match (Promiscuous)  
Private call match (Promiscuous)  
8 hours of recording



## CONTENTS

<b>Getting Familiar</b>	01
<b>Safety and Overview</b>	03
<b>Overview</b>	04
Switch On	04
Adjust Volume	04
<b>Launch And Receive Calls</b>	06
Zone Selection	06
Selection of Channels ,User ID Or Group ID	06
Receive And Reply Group Call	06
Receive And Reply The Single Call	07
Receive All Calls	08
Launch A Radio Call	08
Using Channel Knob To Make A Call	09
Group Call	09
Private Call	09
All Call	10
Use A Key To Make A Group Call Or Private Call	10
Using Manual Dial to make a call	11
<b>Emergency Function</b>	12
Receive Emergency Call	12
Reply The Emergency Call	13
Emergency Alarm	14
Emergency Alarm Call	14

Voice Emergency Alarm	15
Restart Emergency Mode	16
Logout Emergency Mode	17
<b>Menu Operation</b>	19
Character Input	19
English Typing	19
Chinese Typing	20
Numeral Writing	20
Menu Application	21
Radio Check	21
Send Radio Check	21
Monitor	22
Start Monitor	22
Contacts Setting	23
Group Call With Contacts	24
Private Call With Contacts	25
New Contacts	26
Call Log	26
Checking New Call's Number	26
Missed Call	26
Storing Missed Call's Alias Or ID	27
Deleting Call Log's Record	28
Call Alert Operation	28
Receiving And Checking Call Alert	28
Starting Call Alert From Contacts List	29

Message Function	29
Edit And Send SMS	29
Send Quick Text	30
Send Quick Text With A Key	32
Manage The Failed SMS	32
Manage The Sent SMS	34
Receive SMS	37
Check the SMS	38
Manage Received SMS	38
Check The Inbox SMS	39
Reply The Inbox SMS	40
Deleting The Inbox Messages	41
Deleting All Messages In The Inbox	41
Encryption	42
Basic Encryption	42
DTMF	42
Secrecy	43
Radio Disable	43
Radio Enable	44
Scan list	45
Check Members of List	45
Scanning Instruction	45
Start/Stop Scan	46
Scan Reply	47
Add Scan Channel	47

<b>Utilities</b>	
Radio Settings	48
Talkaround	49
Tones/Alerts	49
All Tones	50
Keypad Tones	50
Power	51
Backlight	52
Squelch	52
Intro Screen	53
Keypad Lock	53
Language	54
LED Indicator	55
VOX	55
Passwd Lock	57
Clock	58
Time	58
Date	58
Time Zone	59
Mode	59
Private Call Match	60
Group Call Match	60
Call Interrupt	60
Menu Hang Time	61
Tx Mode	61
Last CH	61

Radio Info	62
My Number	62
Versions	63
Program Radio	64
RX Frequency	64
Tx Frequency	65
Channel Name	66
TOT	67
CTC/DCS	67
Encode	67
Decode	68
Color Code	69
Repeater Slot	69
VOX level	70
Tx Contact	70
GroupList	71
Mic Level	71
Export/Import the Digital Contact	71
GPS system	72
Record (Be able to record for more than 8 hours when it's 3000 channels & 10000 contacts)	72
Record On/ Off	72
Record Check/Playback	73
CSV contacts	74
Specifications	76
Guarantee	

# Getting familiar

## Safety and Overview

### Overview

Professional FM Transceiver


## Getting familiar

Antenna  
with threaded head, for  
transmitting and receiving

LED indicator light  
The indicator light turns red when  
transmit, turns green when receive.  
It blinks red when the battery  
capacity is low, and blinks green  
when scanning.


Speaker  
sound output

Microphone  
sound input

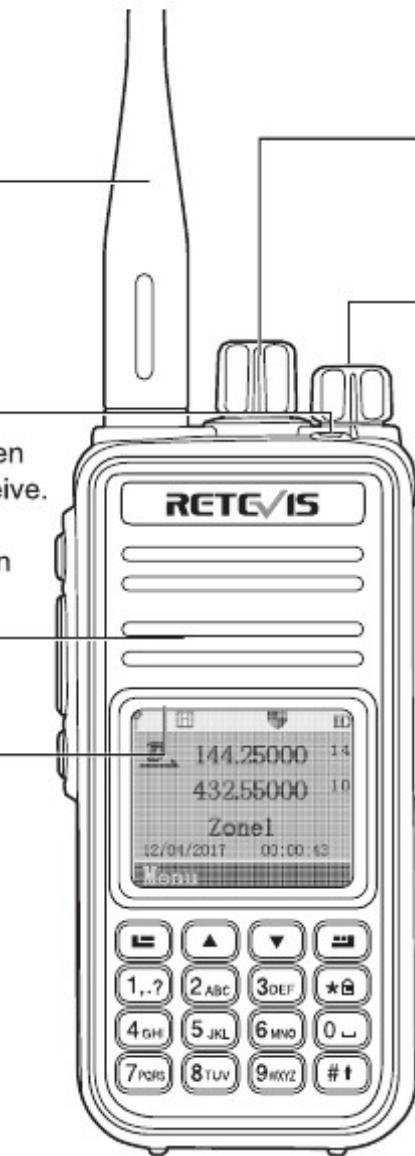

Channel-selecting knob  
Select the working channel, channel  
annunciation when voice prompt is ON.

Power/volume knob  
To power on/off and adjust the volume.  
Rotate it clockwise, a "click" sound is  
heard and a "Du" tone prompts the  
radio power on, continue to rotate it to  
adjust the volume. Rotate it counter-  
clockwise until a "click" sound is heard,  
it powers off.

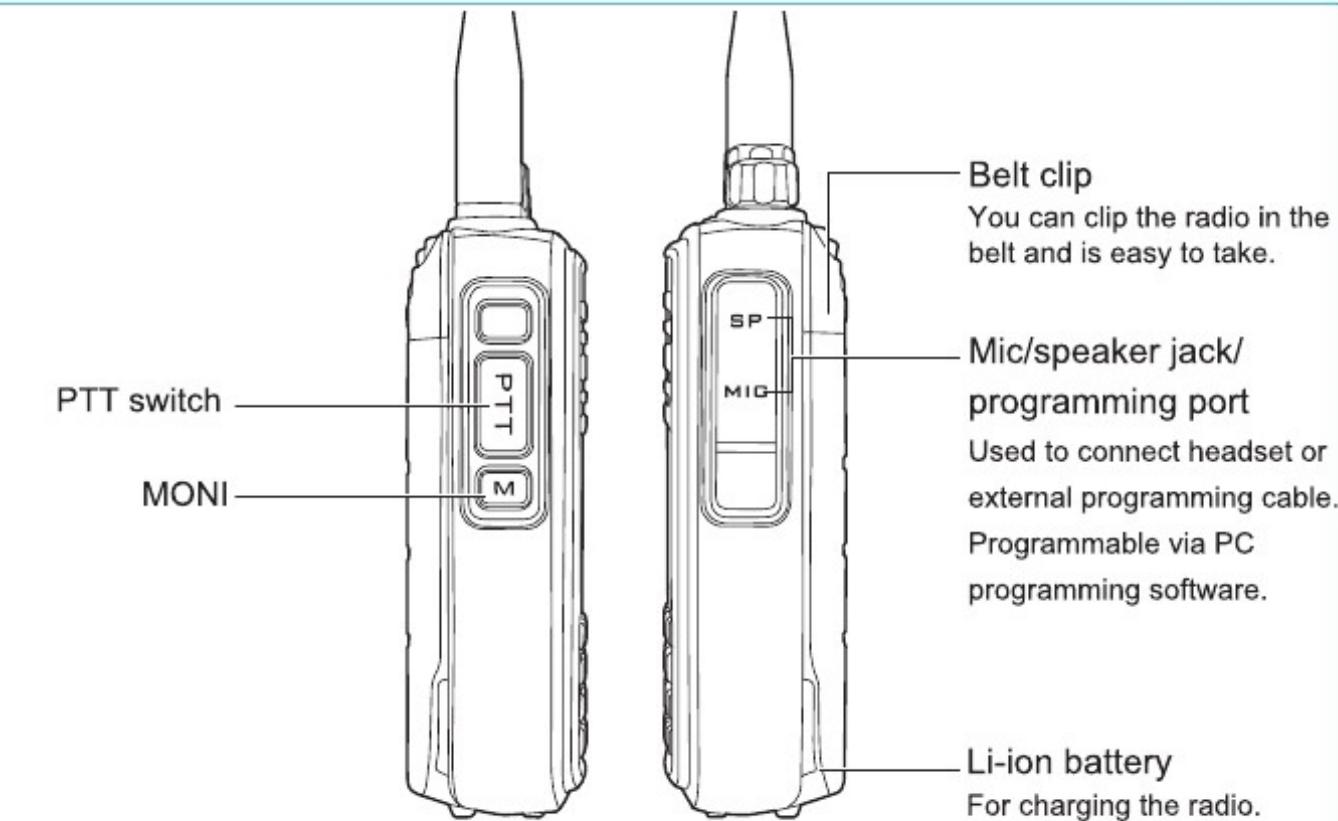

Notice: Either long-press or short-press of side-key1/ side-key2/P1/P2 can be programmed by  
software for the following functions:

- 1.Unassigned
- 2.All Alert Tones On/Off
- 3.Emergency On
- 4.Emergency Off
- 5.High/Low
- 6.Monitor
- 7.One Touch Access 1
- 8.One Touch Access 2
- 9.One Touch Access 3
- 10.One Touch Access 4
- 11.One Touch Access 5
- 12.One Touch Access 6
- 13.Repeater/Talkaround
- 14.Scan On/Off
- 15.Tight/Normal Squelch
- 16.Privacy On/Off
- 17.VOX On/Off
- 18.Zone Select
- 19.Battery Indicator
- 20.Lone Work On/Off
- 21.Record On/off (Firmware)
- 22.Record Playback (Firmware)
- 23.Delete All Record(Firmware)
- 24.1750Hz
- 25.Switch Up/down Screen
- 26.Right Key
- 27.Left Key

## Safety and Overview

Product safety and RF Exposure for handheld two way radio .



Before using this two way radio, please read the manual which contains important operating instructions for safe usage, RF Energy Awareness, control information and operational instructions for compliance with RF Energy Exposure limits in applicable national and international standards. Also read the operational instructions for safe use.

## Overview

### Switch On

Clockwise to turn on the radio volume knob, there will be a "KADA" sound, message sound, while the LED indicator lights up and becomes Green color if the battery is full charged.

Notice: if all LED indicators are forbidden, the screen will not light up when switch on the walkie talkie, but with a message sound.

Notice: if the Tones/Alerts is forbidden, there will not any sound when power on. Here, need to power off the walkie talkie and anticlockwise with the knob until a "KADA" sound.

### Adjust Volume

Clockwise the volume knob to higher the volume or anticlockwise to lower: And there shows a volume line on the screen

## Launch And Receive Calls

### Emergency Function

Professional FM Transceiver

## Launch And Receive Calls

### Zone Selection

Zones is a channel group. Each radio can set 250 zones and each zone with max 16 channels

The menu function:

1. Press [  ] key to enter the menu.
2. Press [  or  ] key to choose, after that with [  ] key to confirm.
3. Screen shows the chosen zone and named by it.
4. Press [  or  ] key to chose, after that press [  ] key to confirm.
5. Screen shows the chosen zone and named by it.

### Selection Of Channels, User ID Or Group ID

Select the needed zone (if there are more than one zone ), using the channel knob to select the channel, user name or ID, group name or ID.

### Receive And Reply Group Call

The radio must be under a group, then can receive the group call.

When received the group call:

1. LED indicator is green color.
2. On the top of the middle screen will show RSSI mark: First line will show the group name, income call ID will be in the middle, group call ICON will be the last ( this happens only under Digital mode )

3. Hold the radio and place it between your lip within 2.5~3cm
4. Press[PTT]key to answer the call, LED indicator light change to red color.
5. Release[PTT]key to receive next call
6. If there are not any voice activity, the call end.

Notice: When the radio out of the home page and if there is a group call income, it will be show all the time on the screen before you answer it.

Press [  ] key to receive the call, and check the income ID before reply.

#### Receive And Reply The Single Call

Single call means one on one call. Only with two types: One is testing presence of radio before call, and another one is to call immediately.

##### When Receive The Single Call:

1. LED indicator is green color.
2. On the top of the middle screen will show RSSI mark, follows shows single call, user name or ID in the middle, single call mark at the end (Only for analogue mode).
3. Hold the radio and place it between your lip with 2.5~3cm  
If on the "free channel message sound" function, let go [PTT] key, you can hear a message sound, means this channel is free for you to answer.
4. Press[PTT]key to answer the call, LED indicator light change to red color.
5. Release [PTT]key to receive.
6. If there are not any voice activity, the call end.

7. You will hear a message sound and screen shows the call finished.

#### Receive all calls

All call means a walkie talkie call up all other users in a channel to public an important information

When receive the all calls:

1. LED indicator becomes green.
2. On the top of the middle screen will show RSSI mark,follows shows all call, User name or ID in the middle, all call mark at the end (Only for digital mode)
3. End of the all call, radio back to the screen before all call. If under the "free channel message sound" function, when release the PTT key, you will hear a message sound, means this channel is free to use and cannot reply

Notice: when receive the all call, if you turn over to another channel, the radio stop to receive all call. During the all call, You cannot use any re-programmed key until the call finished.

#### Launch a radio call

You can choose a channel, user ID or group call with following methods

- Channel Knob
- Pre-programmed key
- Contacts
- Manual dialing (only for single call)

## Using Channel Knob To Make A Call

### Group Call

The radio should be under the group then can have the group call

1. Turn over channel knob , use group name or ID to choose channel
2. Hold the radio and place it between your lip with 2.5~3cm.
3. Press[PTT]key to call, LED indicator changes to red. Screen shows group name or ID with group mark.
4. Let go [PTT] key to receive, when target radio is replying, LED indicator becomes green. Screen shows group mark or name or ID .
5. If on the "free channel message sound" function. let go [PTT] key, you can hear a message sound, means it channel is free for you to answer.  
If there are not any transmitter within the time limited, the call failed.
6. When walkie talkie back to home screen, you can make a group call with contacts.

### Private Call

1. Turn over channel knob, use the name or user ID to choose channel.
2. Hold the radio and place it between your lip with 2.5~3cm.
3. On the top of the middle screen will show RSSI mark, follows shows private call.  
User name or ID in the middle, private call mark at the end (Only for analogue mode).
4. Let go [PTT] key to receive, when target radio is replying, LED indicator becomes green
5. If on the "free channel message sound" function, let go [PTT] key, you can hear a message sound (means it channel is free for you to answer)

If there are not any transmitter within the time limited, the call failed.

6. You will receive a message sound and screen shows call finished.

You can make a single call with contacts or use keyboard to search the target walkie talkie to make a call.

### All Call

Walkie talkie must be programmed with this function, so that you can send information to every user who are under the channel.

1. Turn over channel knob, use the name or user ID to choose channel.
2. Hold the radio and place it between your lip with 2.5~3cm.
3. Press [PTT] key to release a call, LED indicator becomes to red color. Screen shows Group name or ID with all call mark.

User under the channel can not reply the call.

### Use A Key To Make A Group Call Or Private Call

Single key call function is convenient for you to set a name or ID for group call or private call with long-press or short-press the program key. Set a name or ID for a key there are more than one private call key.

1. Press pre-programmed call key.
2. Hold the radio and place it between your lip with 2.5~3cm
3. Press [PTT] key to call, LED indicator becomes to red color. Screen shows name or ID with a mark.

4. Let go[PTT] key to receive, when target walkie talkie is replying, LED indicator changes to green.
5. If on the "free channel message sound" function, let go [PTT] key, you can hear a message sound, means it channel is free for you to answer.  
If there are not any voice activity, the call end.
6. Walkie talkie back to before call screen.

#### Using Manual Dial to make a call

There are two methods to enter Manual Dial

- Contacts
- Shortcut key

Press [  ] → Contacts → Manual Dial

Shortcut key

When radio standby, press [  ] to enter Manual Dial.

## Emergency Function

Emergency alarm only use to transfer emergency situations, you can release a emergency call at anytime and anywhere. Even the walkie talkie is busy in transferring or receiving Radio support 3 types of emergency call:

- Emergency Call
- Call follow emergency alarm
- A voice follow emergency alert

Moreover: alarm has the following types:

- Prohibit: radio can not send emergency call but can receive.
- Local + Remote: An emergency call with voice or notice.
- Remote: an emergency call without any voice or notice. Before press [PTT]key to call, local radios will not receive any voice or notice.
- Remote + Voice: radio sending an emergency call while accept to receive calls. Before press the [PTT] key to transmitter or reply, there are not any notice

Only one part of above emergency situations can be set as pre-programmed key.

### Receive Emergency Call

1. When receiving emergency call, number of emergency calls and alarms received, exchange the sender name or ID.
2. With a message sound and LED indicator becomes red
3. If the radio have activated, then will confirm the emergency alarm automatically. When

the radio receive the emergency alarm, screen shows the emergency alarm warning mark, until send with a confirm message then can logout. While, you will not receive any calls and notices from other radios during this situation.

Notice: short-press [  ] key, then with the pre-programmed off key, delect all received emergency call and logout the emergency mode .

#### Reply the emergency call

When received the emergency call:

1. Press any key to stop the emergency call alarm
2. Hold the radio and place it between your lip with 2.5~3cm. If on the "free channel message sound" function, let go [PTT] key, you can hear a message sound, means it channel is free for you to answe.
3. Press [PTT]key to have a call. LED indicator becomes red. walkie talkie under the emergency call mode.
4. Let go [PTT] key to receive, when reply the emergency call, LED indicator becomes green. The screen shows group mark or ID and call ID
5. After the call, short-press [  ] key, then press pre-programmed emergency key to off, delect all the emergency call and logout.
6. Radio back to home screen.

#### Emergency Alarm

This function called not-speech signal and allows to send emergency alarm and will trigger on another radio.

1. Press pre-programmed power on key.
2. Screen shows sending emergency call, exchange ID with other walkie talkie. LED indicator changes to red and emergency call mark will down on the home screen.
3. When receive the emergency call, the radio issues the emergency call and LED indicator changes to green, screen shows emergency call send out successfully.  
Or, if the radio does not receive any confirm with the emergency call and out of the sending times, the radio will with a message sound and screen shows the emergency call failed.
4. Radio logout the emergency mode and back to home screen. If the radio under silence mode, there will not any sounds or reminder during the emergency mode.

#### Emergency Alarm call

This function allows you to send emergency call to other radio. After confirmed by the radio, the two radios can contact by a pre-programmed channel.

1. Press pre-programmed key to switch on
2. Screen shows sending emergency alarm call, exchange ID. LED indicator becomes red, emergency call mark will down on screen.
3. when the radio confirm with the sending emergency, screen will show emergency call successful and LED indicator change to green.

4. Hold the radio and place it between your lip with 2.5~3cm.
5. Press[PTT]key to call, LED indicator light changes to red, screen shows the group mark.
6. Let go [PTT] key to receive.
7. If on the "free channel message sound" function, let go [PTT] key, you can hear a message sound (means it channel is free for you to answer)  
Or press pre-programmed emergency call to off and logout the mode.
8. Radio back to home screen. If the radio is under the silence mode, there are not any sounds or notices during the emergency mode, not receive calls from target walkie talkie, until press the [PTT] key. If the radio under "with voice mute" mode, there are not any sounds or notices during the emergency mode, not receive calls from target walkie talkie. Until press the [PTT]key to call or receive, then the screen will show up.

#### Voice emergency Alarm

This function allows you to send emergency call to others ,after confirm with you, your radio microphone activate, allows you to call other radios with press the [PTT] key. This called "Emergency microphone". If press [PTT] key during pre-programmed emergency microphone. radio without ignore the [PTT] and stay on emergency mode.

Notice: If press[PTT]key during the emergency microphone, hold the key before duration within limits, let go [PTT]key to transfer.

1. Press the pre-programmed emergency start key.
2. Screen shows sending emergency call, LED indicator becomes red color and emergency call Mark will show on Screen.

3. Screen will show emergency call successful, then speak clearly. When under activated emergency microphone, radio transfer automatically without press [PTT] key before duration within limits
4. During transfer, LED indicator becomes red and emergency alarm mark will show on screen.
5. After the time of emergency microphone, radio stop to transmit. Press [PTT] key to transmit again If the radio under the "Silence" mode, there are not any sounds or notices during the emergency mode, not receive calls from target walkie talkie, until pass the pre-programmed emergency microphone limited time and press with [PTT] key. If the radio under "with voice mute" mode, there are not any sounds or notices during the emergency mode, not receive calls from target walkie talkie. Until press the [PTT]key to call or receive, then the screen will show up.

Notice: If the emergency call failed, then the walkie talkie will back to home screen.

#### Restart Emergency Mode

Two situations will be happen:

- It will logout the emergency mode, if the walkie talkie change the channel under the emergency mode. While, reset the emergency mode under the new channel, the walkie talkie restart the emergency call.
- If press the Pre-programmed emergency key during the emergency call, the walkie talkie will be stop the emergency call but restart later.